




P I N D R O P™

ANGLED SHAPES

# TUXEDO

— INSTALL GUIDE —

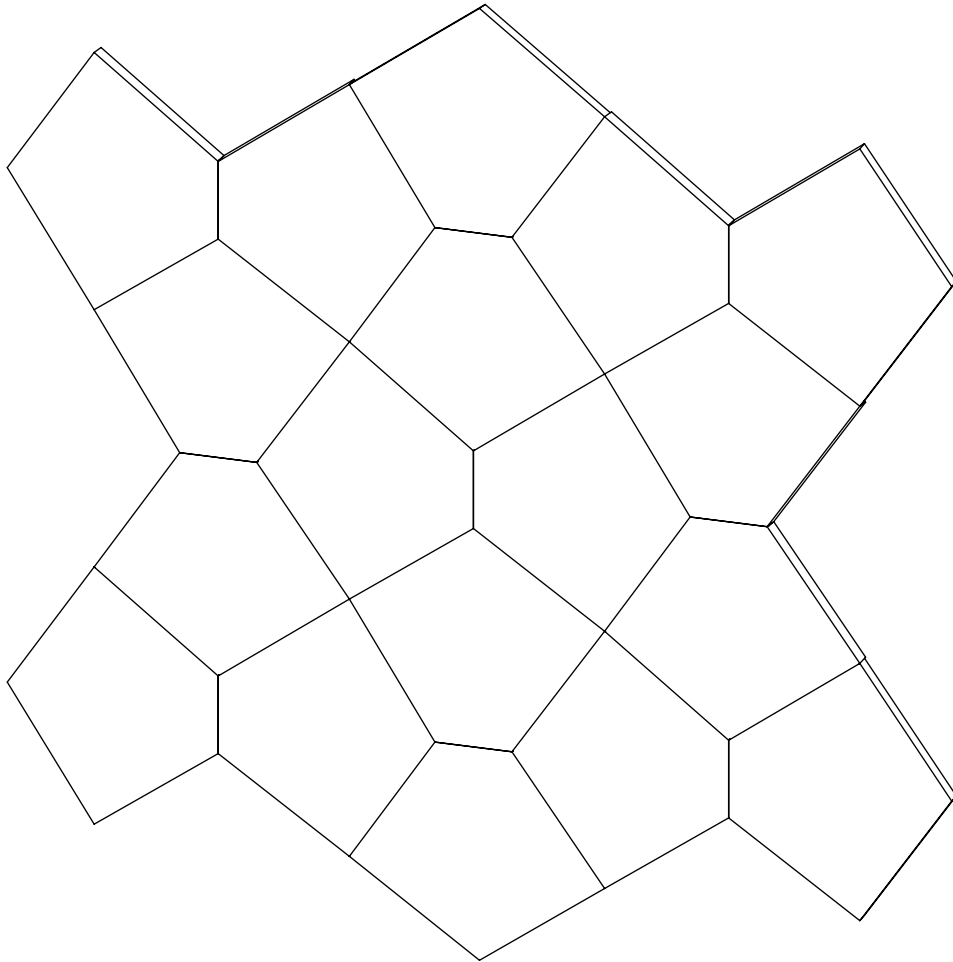

**MOMENTUM**  
TEXTILES & WALLCOVERING

# ANGLED SHAPES


## MAKE SITE READY




### TIPS FOR INSTALLATION

1. Clean applicable walls free of dirt and dust to ensure a good bond.
2. Set out tiles as specified to be sure all pieces are included.
3. We would recommend a rendered printout of the layout to aid installation

### YOU WILL NEED:

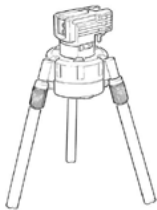


LASER LEVEL

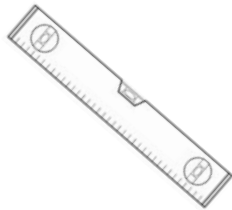


SPIRIT LEVEL



TAPE MEASURE

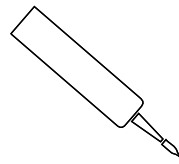

CONSTRUCTION ADHESIVE  
WITH HIGH INITIAL TACK

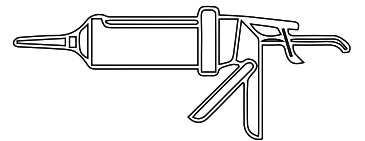


\*Liquid Nails FUZE\*IT MAX

# ANGLED SHAPES INSTALL METHOD




## STEP 1

Use laser and mark the bottom edge of the first row of tiles and a centreline for tile assembly.

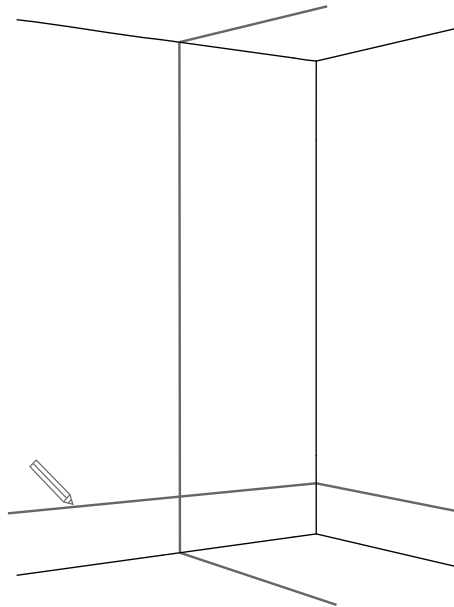

## STEP 2

Apply construction adhesive to the back side of the tile shown in red.

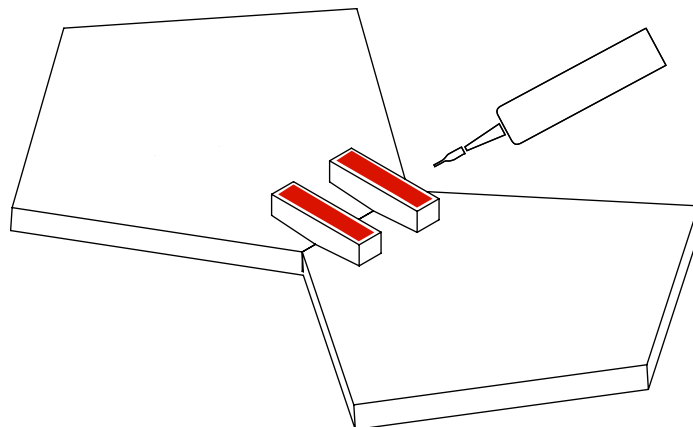


# ANGLED SHAPES INSTALL METHOD




## STEP 3

Fix first tile starting from the centreline and lower pencil marking.  
Apply pressure over glue area to make sure a secure bond is achieved.

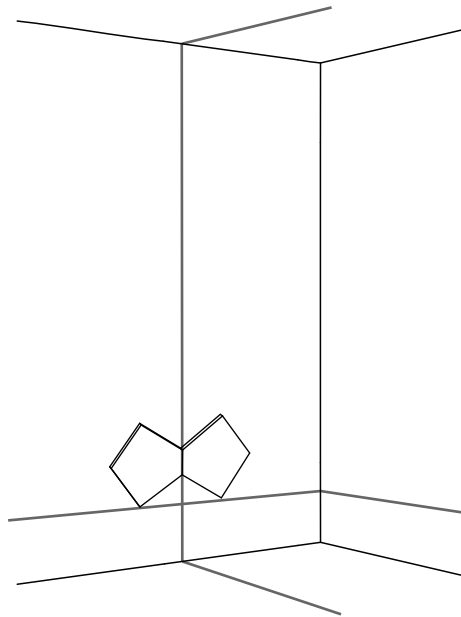


## STEP 4

Continue to check installation is square and level using a level or laser as you apply tiles to the wall.

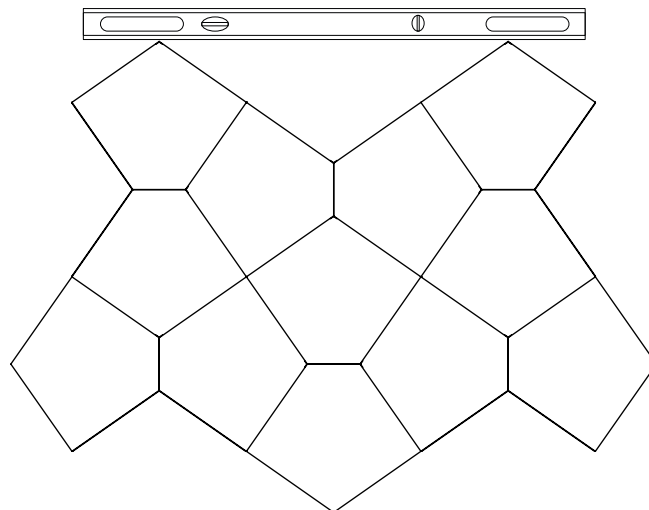

## ANGLED SHAPES INSTALL COMPLETE

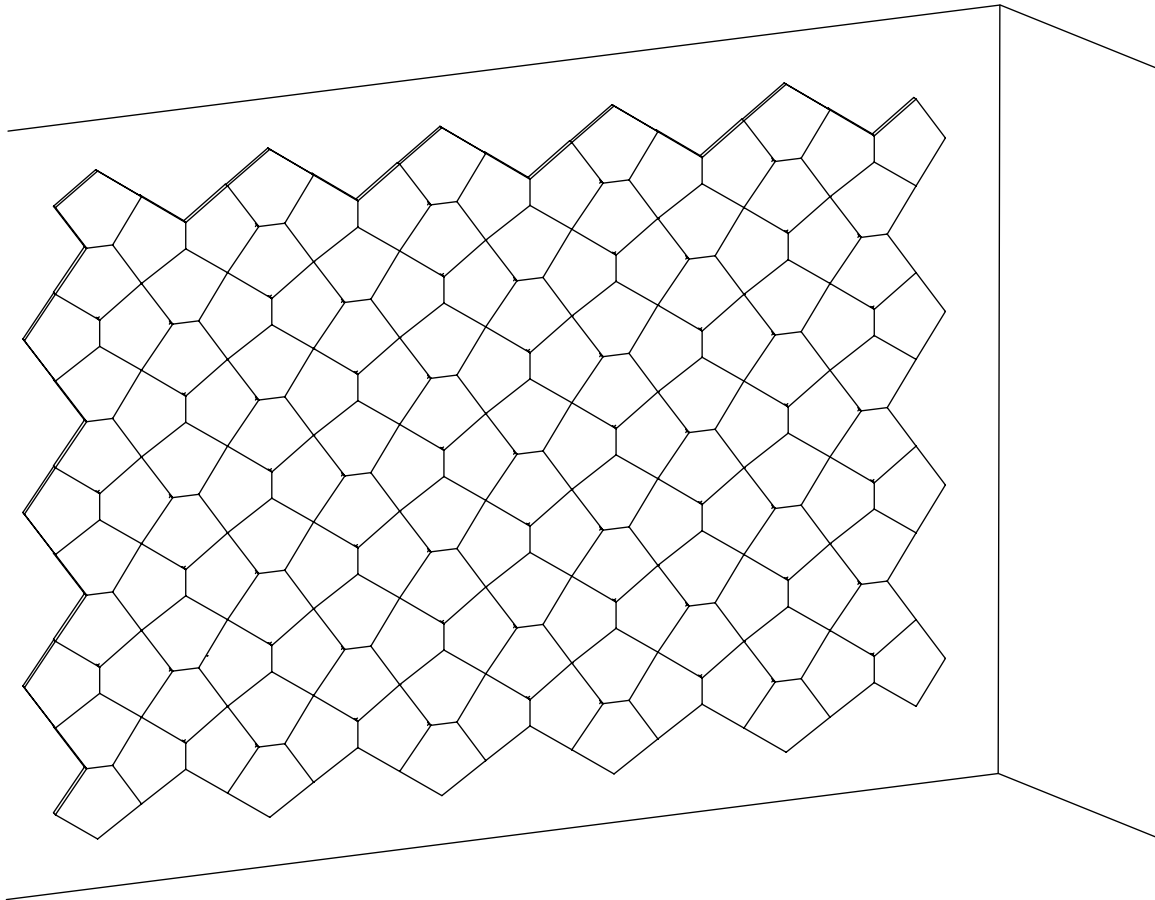

### Cleaning

- \* PinDrop can be vacuumed using low suction and smooth attachment
- \* Treat spills and stains as soon as possible
- \* For soils and bulky build up gently scrape
- \* For liquids, dab gently to remove from the surface, do not scrub
- \* Avoid concentrated rubbing and use minimal pressure only
- \* Do not use dishwashing or laundry detergents, only use polyester upholstery or carpet cleaner
- \* A 1:10 ratio of household bleach to water can be used on tougher stains. After stain removal, dab with a clean water dampened cloth to remove bleach concentrate and allow to air dry
- \* Always trial clean in a non-exposed area