


# WAVE

## INSTALL GUIDE



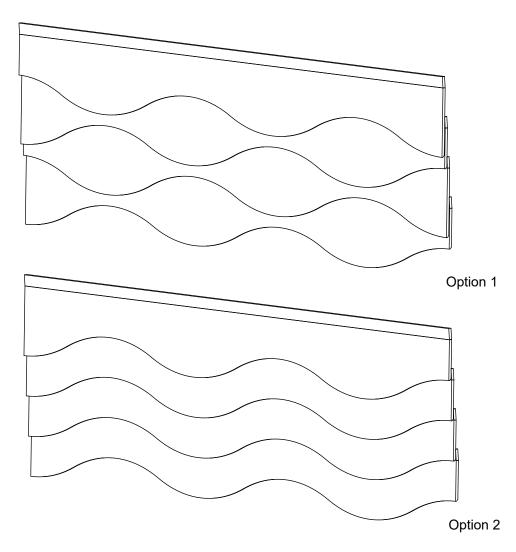


# **WEATHERBOARD**MAKE SITE READY



#### TIPS FOR INSTALLATION

- 1. Clean applicable walls free of dirt and dust to ensure a good bond.
- 2. Set out tiles as specified to be sure all pieces are included.
- 3. We would recommend a rendered printout of the layout to aid installation


#### YOU WILL NEED:

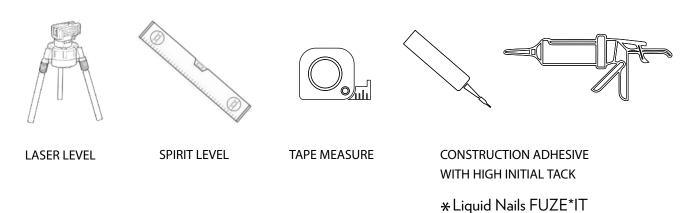




### STEP 1

Use laser and mark the bottom edge of the first row of tiles and a centreline for tile assembly.

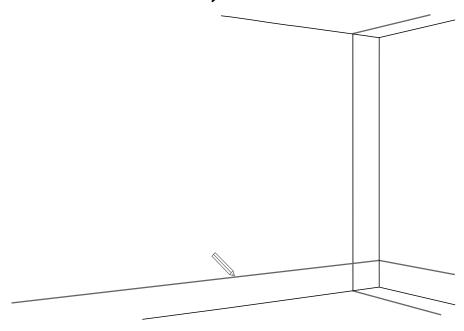

STEP 2
Apply construction adhesive to the back side of the tile shown in red.

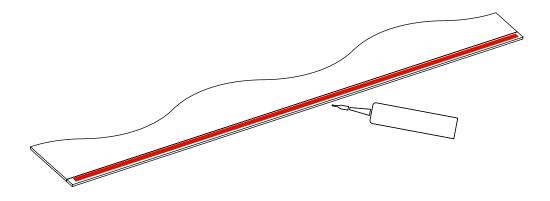




**INSTALL METHOD** 




STEP 3

Fix first tile starting from the centreline and lower pencil marking. Apply pressure over glue area to make sure a secure bond is achieved.

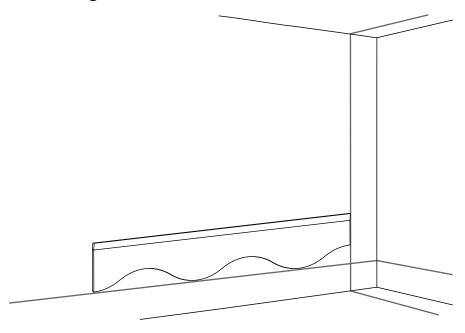

### STEP 4

Measure the distance of 7.2in [183mm] from the top of the first weatherboard panel.

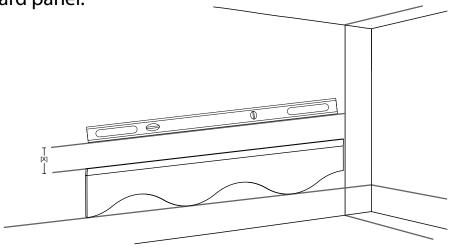




**INSTALL METHOD** 



### STEP 5


Fix second panel starting second marked line which is the top line of the weatherboard panel.

Apply pressure over glue area to make sure a secure bond is achieved.

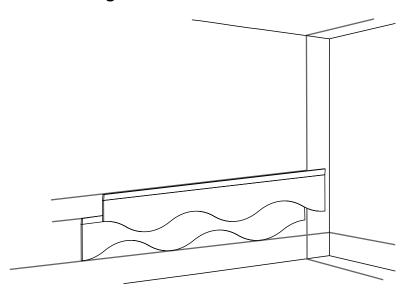

### STEP 6


Continue step 4 & step 5 of installation by checking level using a level or laser as you apply panels to wall.

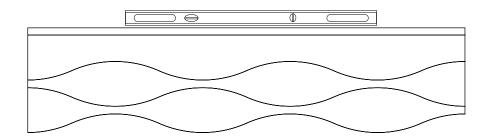



**INSTALL COMPLETE** 



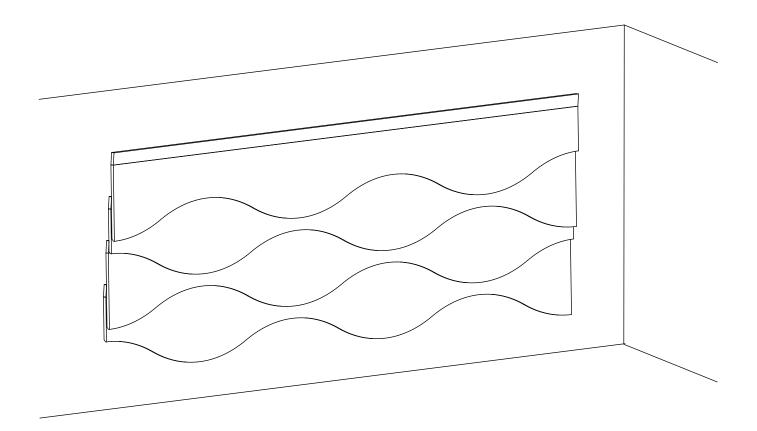

### Cleaning

- \* PinDrop can be vacuumed using low suction and smooth attachment
- \* Treat spills and stains as soon as possible
- \* For soils and bulky build up gently scrape
- \* For liquids, dab gently to remove from the surface, do not scrub
- \* Avoid concentrated rubbing and use minimal pressure only
- \* Do not use dishwashing or laundry detergents, only use polyester upholstery or carpet cleaner
- \* A 1:10 ratio of household bleach to water can be used on tougher stains. After stain removal, dab with a clean water dampened cloth to remove bleach concentrate and allow to air dry
- \* Always trial clean in a non-exposed area

