PINDROP™

WEATHERBOARD

—— INSTALL GUIDE ——

MOMENTUM
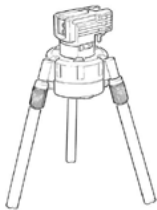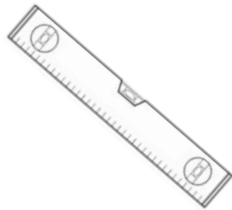TEXTILES & WALLCOVERING

WEATHERBOARD
MAKE SITE READY

TIPS FOR INSTALLATION

1. Clean applicable walls free of dirt and dust to ensure a good bond.

2. Set out tiles as specified to be sure all pieces are included.

3. We would recommend a rendered printout of the layout to aid installation
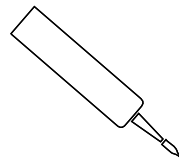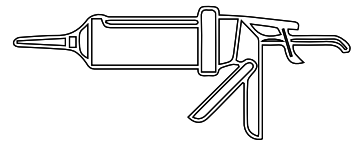
YOU WILL NEED:

LASER LEVEL

SPIRIT LEVEL
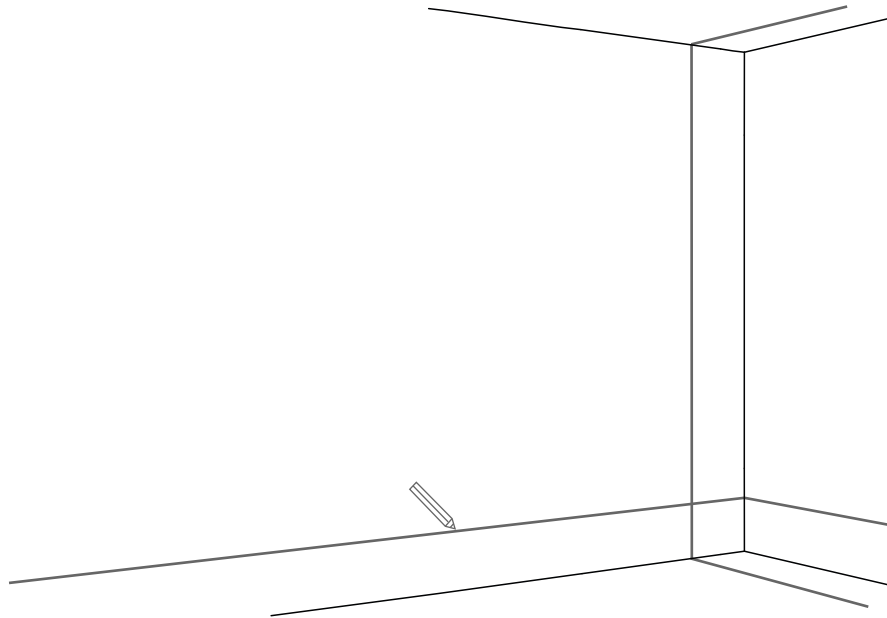
TAPE MEASURE

CONSTRUCTION ADHESIVE
WITH HIGH INITIAL TACK

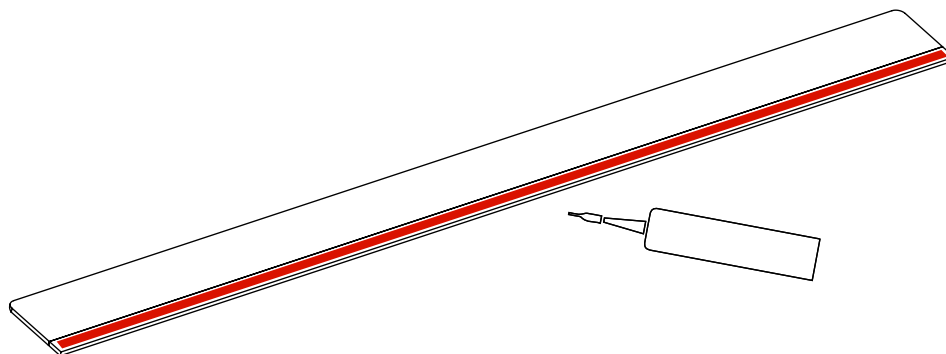✳ Liquid Nails FUZE*IT

MOMENTUM
TEXTILES & WALLCOVERING

STEP 1

Use laser and mark the bottom edge of the first row of tiles and a centreline for tile assembly.

STEP 2

Apply construction adhesive to the back side of the tile shown in red.
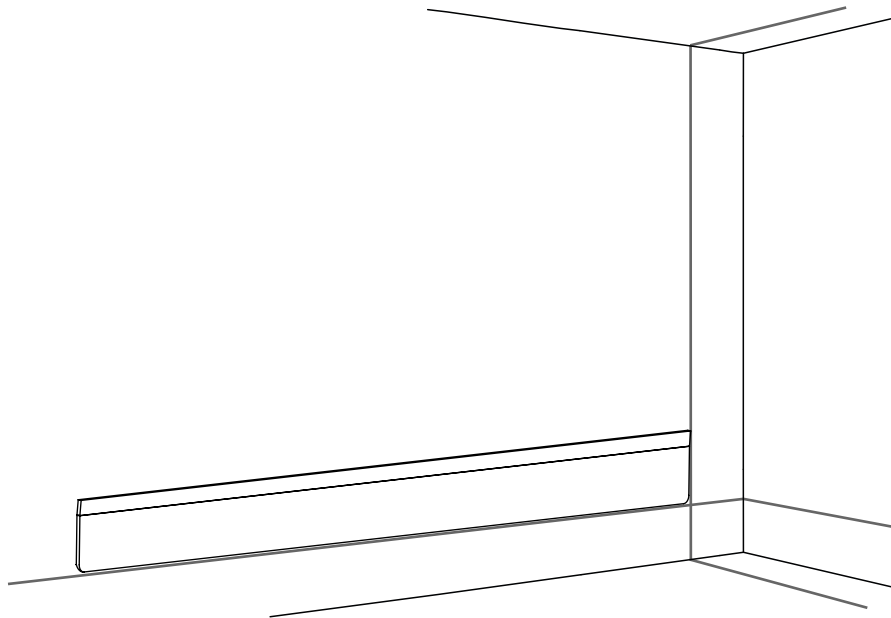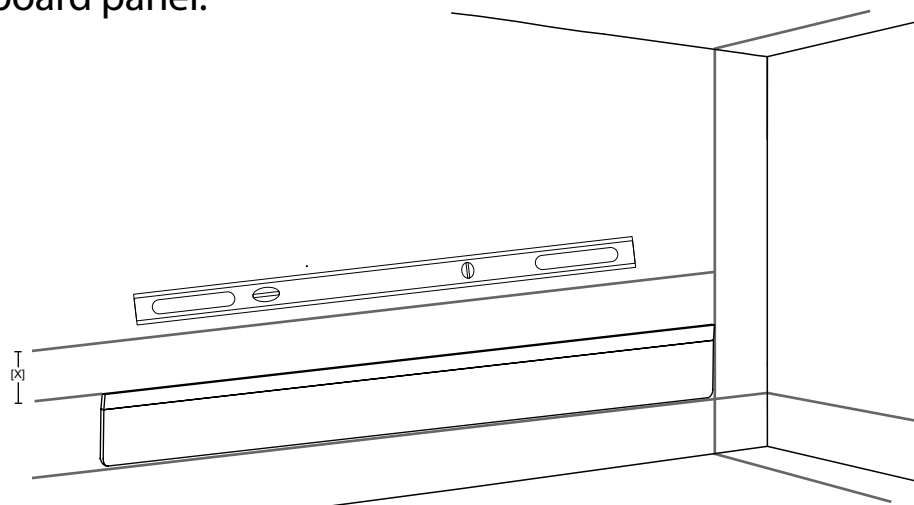
MOMENTUM
TEXTILES & WALLCOVERING

PINDROP™

STEP 3

Fix first tile starting from the centreline and lower pencil marking.
Apply pressure over glue area to make sure a secure bond is achieved.

STEP 4

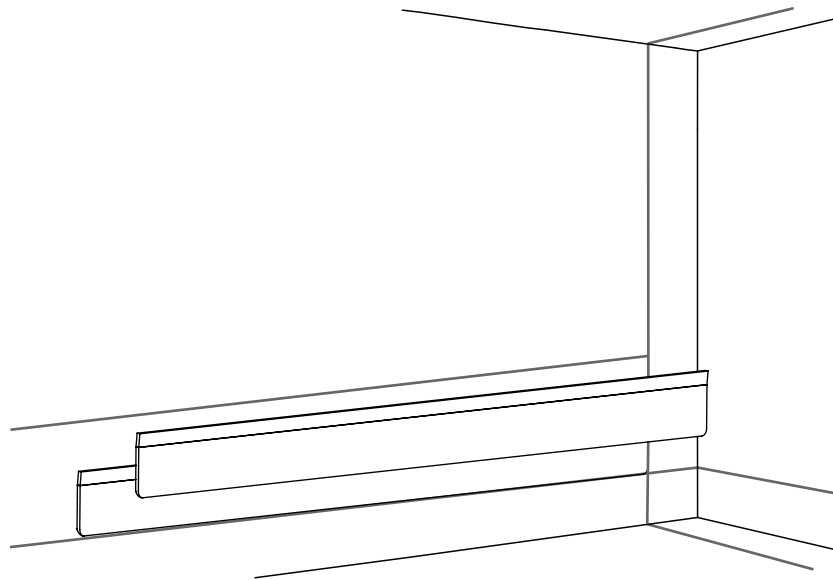Measure the distance of 7.3in [185mm] from the top of the first
weatherboard panel.

[X]

MOMENTUM
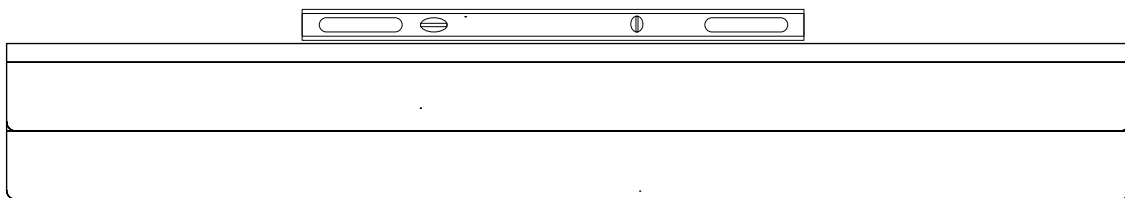TEXTILES & WALLCOVERING

PINDROP™

STEP 5

Fix second panel starting second marked line which is the top line of the weatherboard panel.

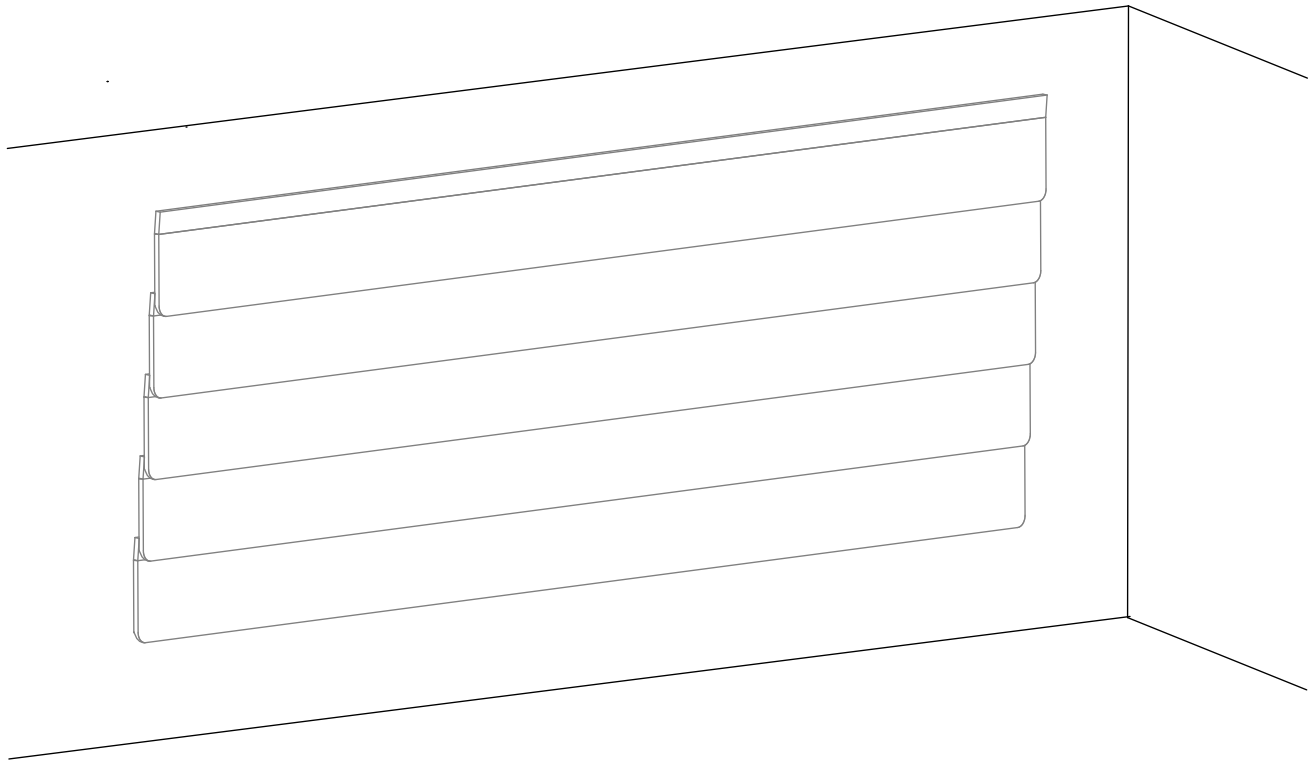Apply pressure over glue area to make sure a secure bond is achieved.

STEP 6

Continue step 4 & step 5 of installation by checking level using a level or laser as you apply panels to wall.

MOMENTUM
TEXTILES & WALLCOVERING

WEATHERBOARD
INSTALL COMPLETE

Cleaning
* PinDrop can be vacuumed using low suction and smooth attachment
* Treat spills and stains as soon as possible
* For soils and bulky build up gently scrape
* For liquids, dab gently to remove from the surface, do not scrub
* Avoid concentrated rubbing and use minimal pressure only
* Do not use dishwashing or laundry detergents, only use polyester upholstery or carpet cleaner
* A 1:10 ratio of household bleach to water can be used on tougher stains. After stain removal, dab with a clean water dampened cloth to remove bleach concentrate and allow to air dry
* Always trial clean in a non-exposed area

MOMENTUM
TEXTILES & WALLCOVERING